

MARSDEN

PB-1200-I-400-NA

Weigh Beams



Tare
Function



One Year
Warranty



CE
Approved


Portable, heavy duty mild steel beam scales

Electronic indicator with 32mm high red LED display

Weigh pallets or crates of any size in seconds

Displays weight reading in either kg or lb

www.marsden-weighing.co.uk

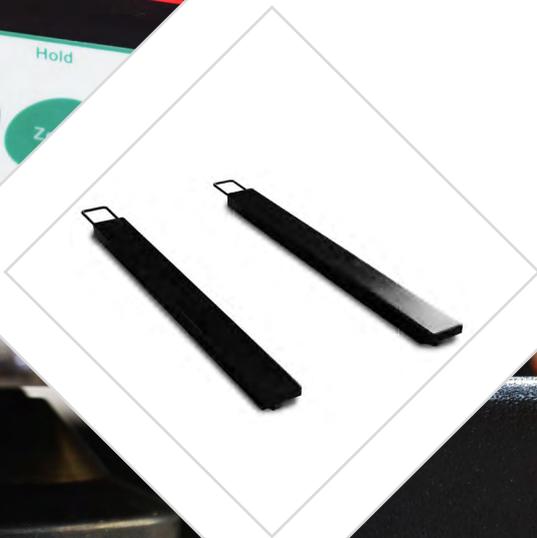

Marsden PB-1200-I-400-NA: A flexible solution to heavy duty weighing

Not everything you weigh will be the same size - but that doesn't matter with weigh beams. These **tough mild steel beams** can be placed the desired distance apart, allowing you to weigh loads that are **long, wide or just awkwardly shaped**. A large, bright LED display on the durable indicator makes these beams perfect for **weighing applications in dimly-lit industrial environments**.

Ultimate portability - guaranteed accuracy

PB-1200-I-400-NA Weigh Beams are chosen by warehouses and factories for their **value for money, flexibility and portability**. Each beam has **wheels and a handle** meaning you can **use them anywhere** in your premises. They'll even fit in the cab of a truck for weighing out on the road. **Two loadcells per beam** mean you're still getting the accuracy of an equivalent platform scale, and 4m of armoured loadcell cable is included as standard.



Get a weight reading - in seconds

Thanks to the **quick connectors** the PB-1200-I-400-NA's beams and indicator can be set up for weighing in no time. Place the beams the desired distance apart, and then add your load. Right up to **two tonnes**, the indicator will give you an accurate weight reading of your goods in **32mm high bright red digits**. That's thanks to a **display resolution of 1/30,000**. Don't want the reading in **metric**? Just switch the display to **lb readings**. Weighing several pallets for one shipment? The PB-1200-I-400-NA will automatically **add up the individual weights** when you select the **Accumulation function**.





Designed for use with pallet trucks

At 88mm, the height of each weigh beam is **perfectly suited to pallet trucks**. Or, if you're adding loads to weigh by hand or by forklift truck, the beams can be used like a platform scale. Simply place a metal plate over the beams, and then remove the plate's weight using the Tare function.

Key features

- Mild steel construction
- Handles and wheels for portability
- Designed for use with pallet trucks
- Tare
- Hold
- Accumulation
- Counting mode
- Unit switchable
- Four heavy duty load cells
- 32mm high bright red LED display
- Programmable auto power-off/screensaver
- Mains powered or rechargeable battery



Easy access functions


The PB-1200-I-400's indicator is packed with easy to use features. **Tare** will allow you to remove the weight of a pallet or crate from the reading. **Hold** will stabilise the weight reading even if your load is moving around.

Specification

- Capacity/graduations: 600kg x 0.1kg; 600kg x 0.2kg; 1500kg x 0.1kg; 1500kg x 0.2kg; 1500kg x 0.5kg; 2000kg x 0.2kg; 2000kg x 0.5kg
- Dimensions: 1200mm x 120mm per beam
- Display resolution: 1/30,000
- Beam height: 88mm
- Power: 6v 4.5A/Hr rechargeable battery
- Adaptor: 7v 1000ma mains adaptor



Marsden PB-1200-NA-I-400: Key features at-a-glance

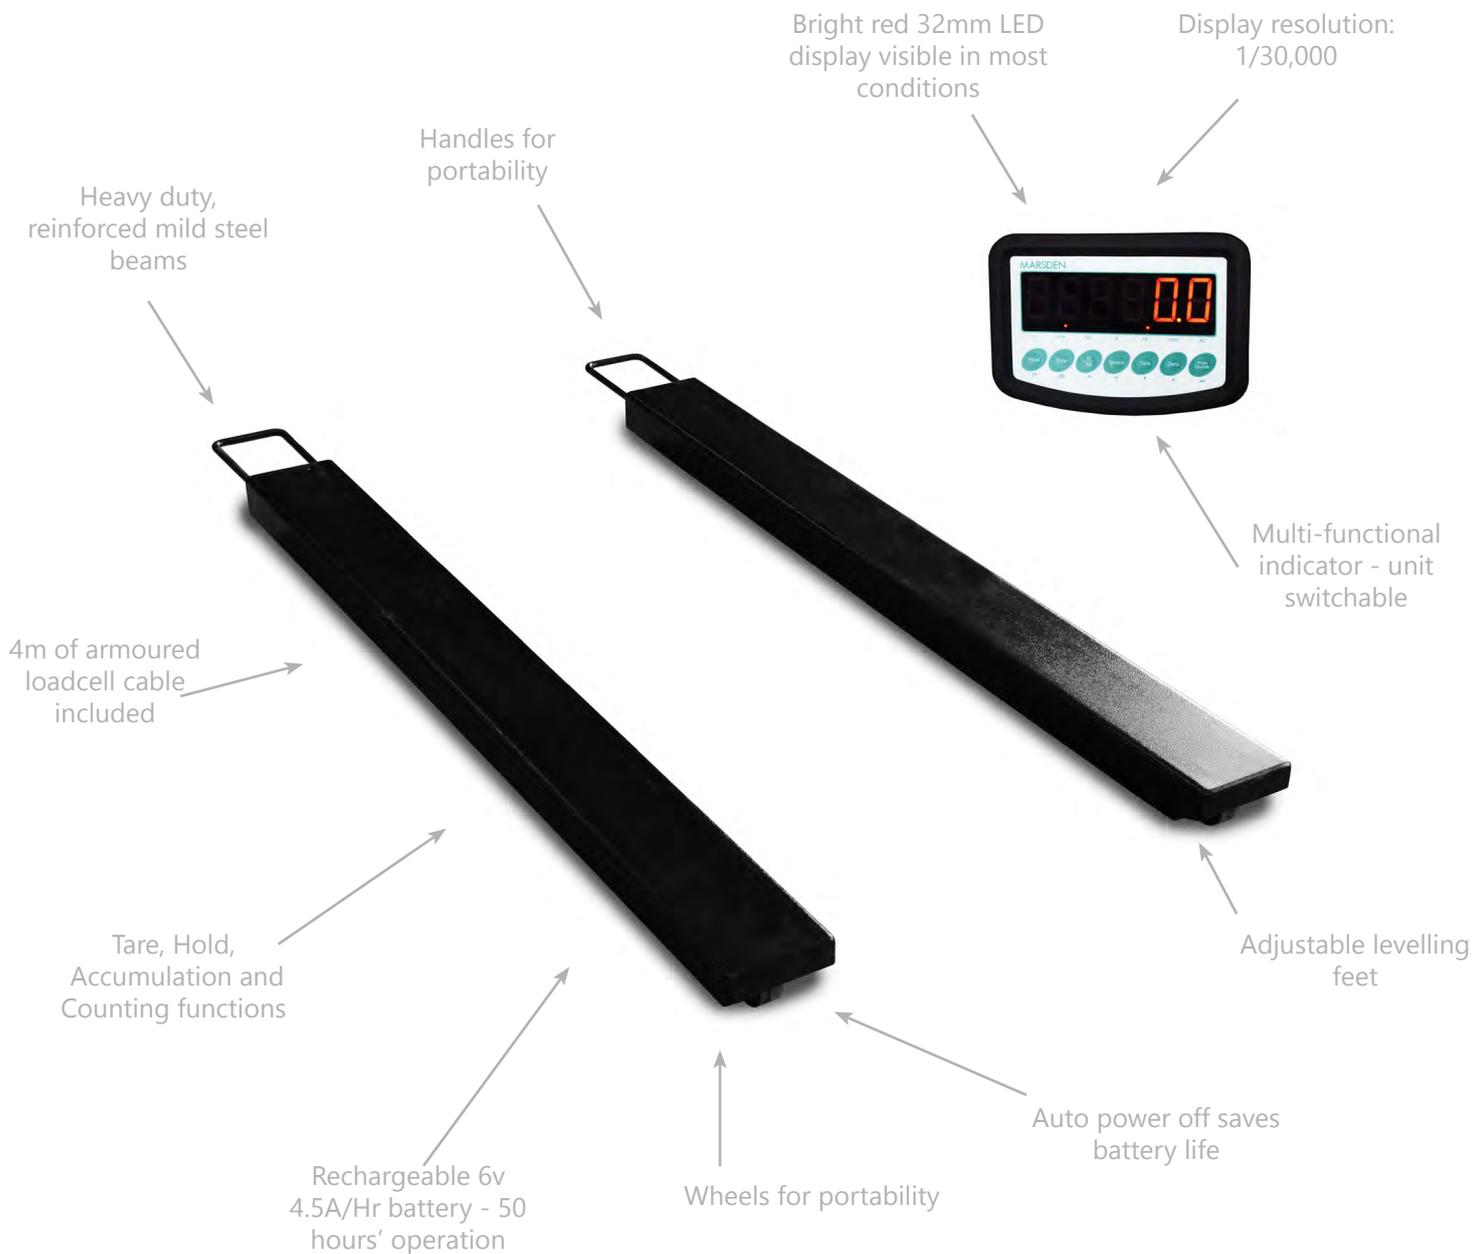

Tel: 01709 364296 / 0800 169 2775

Fax: 01709 364293

E-mail: sales@marsdengroup.co.uk

www.marsden-weighing.co.uk

 MarsdenWeighing

 @MarsdenWeighing

 www.youtube.com/MarsdenWeighing

 <http://pinterest.com/marsdenweighing>

MARSDEN