

MARSDEN

PT-200

Pallet Truck Scale with Printer



Tare
Function



One Year
Warranty



CE
Approved


Heavy duty pallet truck with built-in scale and printer

Rechargeable battery - 70 hours' continuous use

Splashproof, IP67-rated LED indicator

2000kg capacity; 500g accuracy

www.marsden-weighing.co.uk

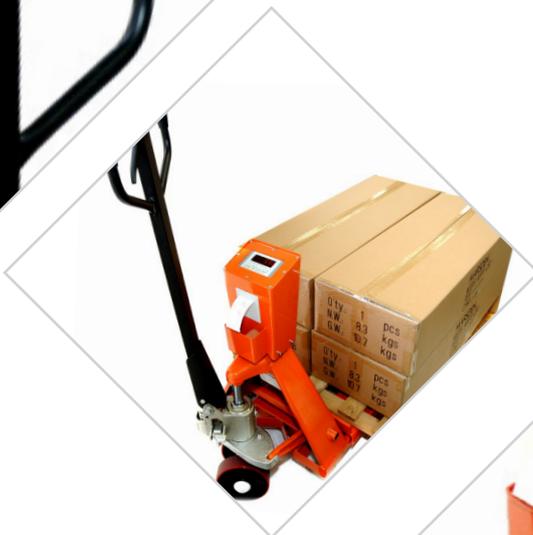

Marsden PT-200: Weigh pallets and record the weight - instantly

The rugged, high capacity **Marsden PT-200 Pallet Truck Scale** is the simple, time-saving way to get an accurate weight of your palletised goods. Four load cells in its mild steel forks provide weight readings to the nearest 500g - then, net weight and tare weight information can be printed from its onboard printer.

Keep track of every weight reading


The **built-in printer** on the PT-200 allows you to print **net weight** and **tare weight** information. A great way to keep track of the weights of pallets coming into, and going out of, your business.

Printed weight readings can also help you keep company records up to date, and show compliance.

Accurate weighing up to 2000kg

Right up to two tonnes, the PT-200 will give you an accurate weight reading of your goods, thanks to **four heavy duty loads cells** in its **mild steel low profile forks**.

Built-in **overload protection** will prevent the scale from damage if you go slightly over the capacity, and the mild steel forks are designed for easy weighing of **euro pallets**.

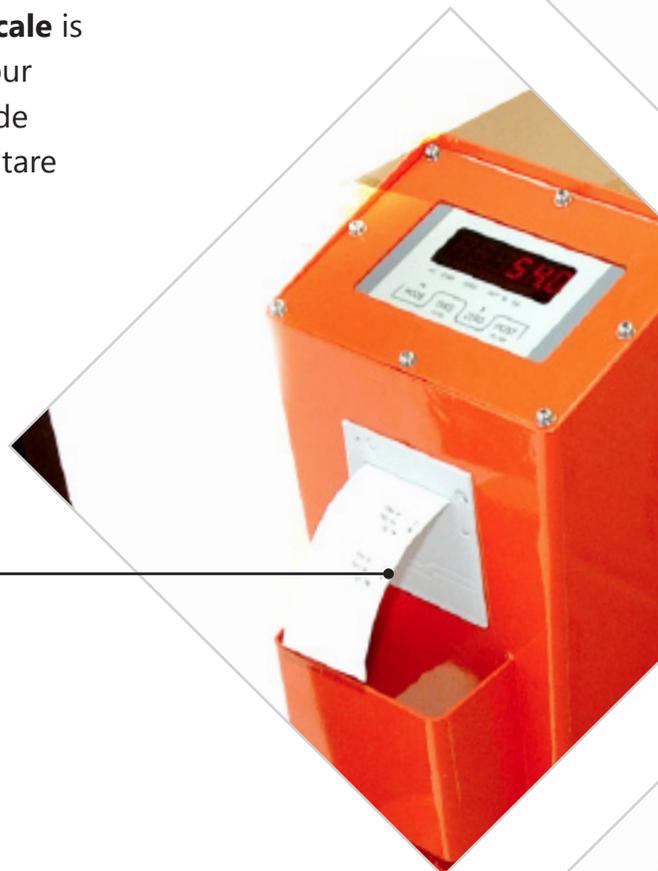

Long-life internal battery for extra flexibility

The **internal rechargeable battery** of the PT-200 will last upto 70 hours. However, **auto power-off** will save battery life, meaning you can use the PT-200 for longer between charges.

Key features

- Tare
- Overload protection
- IP67 splashproof indicator
- Built in printer - prints net weight, tare weight
- Rechargeable battery - 70 hours' use
- Four heavy duty load cells
- Bright red LED display
- Auto power-off
- Low profile forks

Built for harsh conditions

The PT-200's indicator, the I-200, is **IP67-rated**, meaning it'll handle use in harsh conditions. With a tough, **stainless steel** casing, you can wash the indicator down to keep it clean.

Specification

- Capacities/graduations: 2000kg x 500g
- Fork length: 1150mm
- Ground clearance: 78mm
- Power: 7v rechargeable battery
- Adaptor: 7v 1000ma mains adaptor
- Weight of scale: Approx. 125kg

Marsden PT-200: Key features at-a-glance



Tel: 01709 364296 / 0800 169 2775

Fax: 01709 364293

E-mail: sales@marsdengroup.co.uk

www.marsden-weighing.co.uk

 MarsdenWeighing

 @MarsdenWeighing

 www.youtube.com/MarsdenWeighing

 <http://pinterest.com/marsdenweighing>

MARSDEN