

# MARSDEN

## MSS-I-400

### Check Weighing Bench Scale



Tare  
Function



One Year  
Warranty



CE  
Approved

Industrial check weigher; 304 food grade platter  
Large, bright 32mm LED display; readings in kg or lb

Includes rechargeable battery

Choice of capacities, graduations and base sizes

[www.marsden-weighing.co.uk](http://www.marsden-weighing.co.uk)



# Marsden MSS-I-400: Check weighing made simple


Check weighing is now even easier. The Marsden MSS-I-400 combines **tough, rugged build quality** with **easy to use features** and a **bright, bold weight display** - and with a **choice of capacities, graduations and base sizes**, it can be tailored to your needs.

## Get an accurate, digital reading, clearly

The MSS-I-400 is primarily designed for easy but precise check weighing. Therefore, the indicator has a bright, clear 32mm LED display - and display resolution is a very accurate 1/30,000. Don't want the reading in **metric**? Just switch the display to **lb readings**.

## Easy access functions

The MSS-I-400's indicator is packed with easy to use features. **Tare** will allow you to remove the weight of a container from the reading. Hold will stabilise the weight reading, even if your load is moving around. Need to add up the weight of several items? The MSS-I-400 will automatically **add up the individual weights** when you select the Accumulation function, or to count up multiple items there's the **Counting function**.

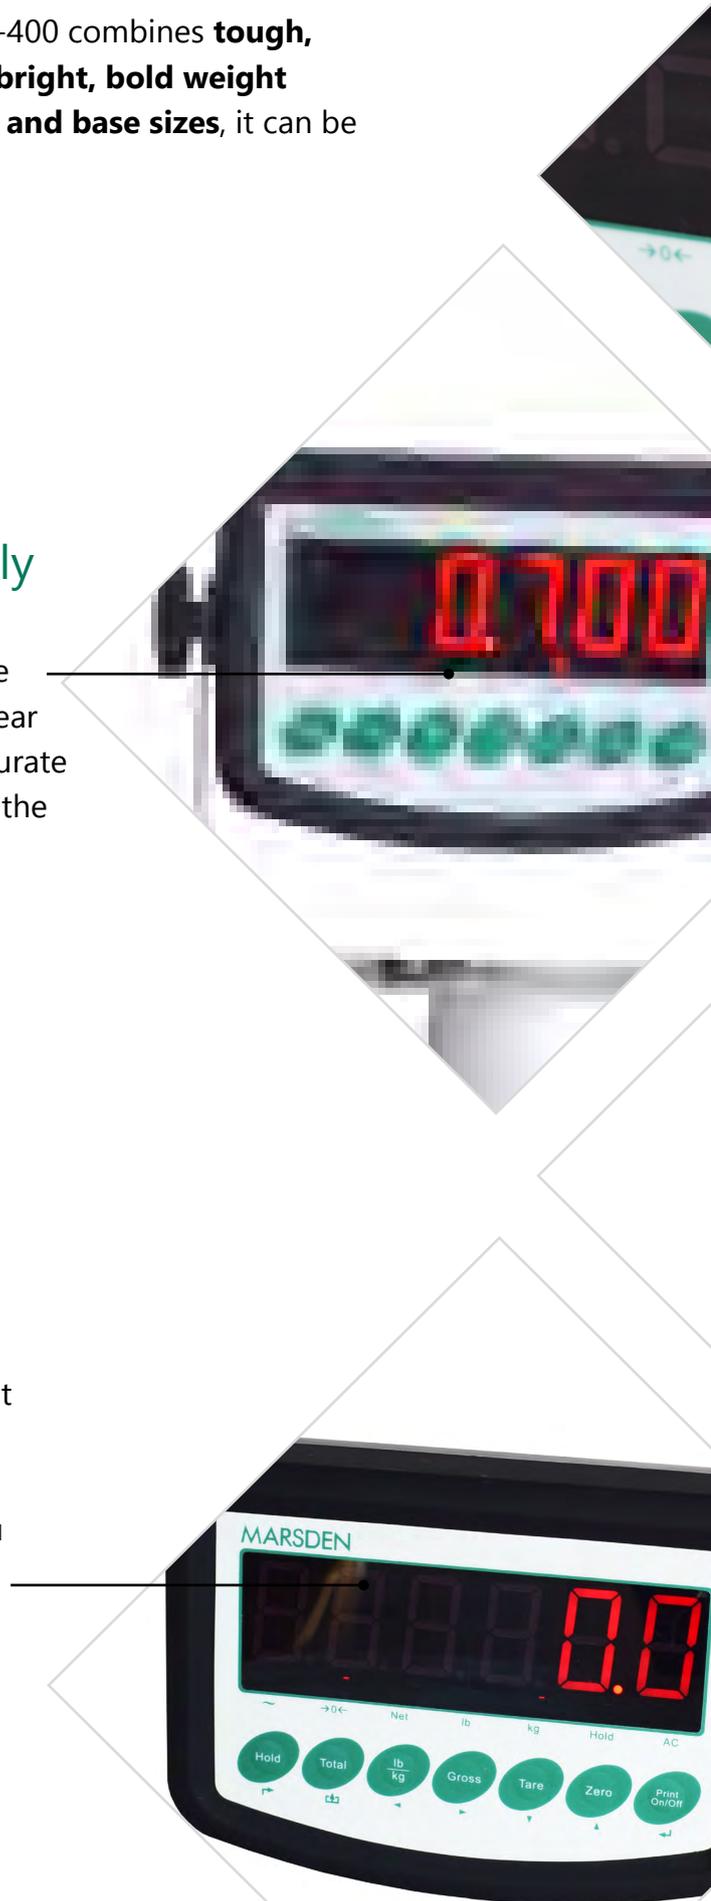



## Stainless steel base for strength and durability

The **reinforced mild steel base** of the MSS-I-400 is available in a number of sizes to suit your needs and includes a stainless steel pan, removeable for cleaning. The indicator is mounted on a strengthened steel column.

## Key features

- 304 food grade stainless steel pan
- 1/30000 display resolution
- Mains powered or rechargeable battery
- Adjustable levelling feet
- Counting mode
- Accumulation
- Hold/Tare
- Large 32mm bright red LED display
- Unti switchable

## Use it anywhere you need it

The MSS-I-400 is powered by **rechargeable battery** so can be used wherever it is required, providing a minimum of **50 hours' continuous use**. The scale can also be mains powered. Additionally, the **adjustable levelling feet** will help with slightly uneven surfaces.

## Specification

- Capacities/graduations: 3kg x 1g / 3kg x 0.2g / 3kg x 0.5g / 3kg x 1g / 6kg x 0.5g / 6kg x 1g / 6kg x 2g / 15kg x 0.5g / 15kg x 1g / 15kg x 5g / 30kg x 1g / 30kg x 2g / 30kg x 5g / 30kg x 10g / 30kg x 2g / 60kg x 5g / 60kg x 10g / 150kg x 20g
- Base dimensions: 300mm x 300mm / 400mm x 400mm / 600mm x 600mm
- Display resolution: 1/30,000
- Power: 6v 4.5A/Hr battery rechargeable battery
- Adaptor: 7v 1000ma mains adaptor



# Marsden MSS-I-400: Key features at-a-glance



Tel: 01709 364296 / 0800 169 2775

Fax: 01709 364293

E-mail: [sales@marsdengroup.co.uk](mailto:sales@marsdengroup.co.uk)

[www.marsden-weighing.co.uk](http://www.marsden-weighing.co.uk)

 MarsdenWeighing

 @MarsdenWeighing

 [www.youtube.com/MarsdenWeighing](http://www.youtube.com/MarsdenWeighing)

 <http://pinterest.com/marsdenweighing>

# MARSDEN