

# MARSDEN

## PB-SS-JIK

# PB-SS-JIK-APP

Multifunctional Stainless Steel Weighbeams



IP68 waterproof weighbeams with IP67 indicator

Options to print and send data to PC

RS-232 fitted as standard

Choice of capacities and graduations

[www.marsden-weighing.co.uk](http://www.marsden-weighing.co.uk)



# Marsden PB-SS-JIK and PB-SS-JIK-APP: Stainless steel beams for modern business operations

The Marsden **PB-SS-JIK** and **PB-SS-JIK-APP** are **stainless steel weighbeam scales** used by food processing factories around the world. With **IP68 waterproof protection**, these scales are perfect if you're working in **wet, damp or dusty environments**.

The JIK indicator has a range of options to enhance and streamline processes.

## Heavy duty stainless steel beams

Like all standard Marsden weigh beam scales, the PB-SS-JIK and PB-SS-JIK-APP are purpose built for loads upto **2 tonnes in weight**.

These scales are built from heavy duty 304 food grade stainless steel so they **can handle some of the most demanding tasks**, with **IP68-certified loadcells** for ultimate protection from moisture and dust.

The indicator, the JIK, is **IP67** certified which means it can be washed down without risk of water finding its way inside the stainless steel casing.


## Print, record and send weight data

One of the key benefits of using a PB-SS-JIK and PB-SS-JIK-APP is the ability to **record weight readings**.

The JIK indicator can connect to a GP-3120 Sticky Label Printer, meaning **weight information, as well as date/ time and count (when applicable) can be printed**, and then filed or affixed to a shipment.

Alternatively, the Scale to PC USB Lead (or wireless USB dongle) allows weight information to be **sent from the scale to a PC**. Simply connect the lead (or the wireless receiver) to your PC, add an item to the scale, and weight information will populate a spreadsheet, database - in fact, **almost any document** or open window you need it to.

[www.marsden-weighing.co.uk](http://www.marsden-weighing.co.uk)

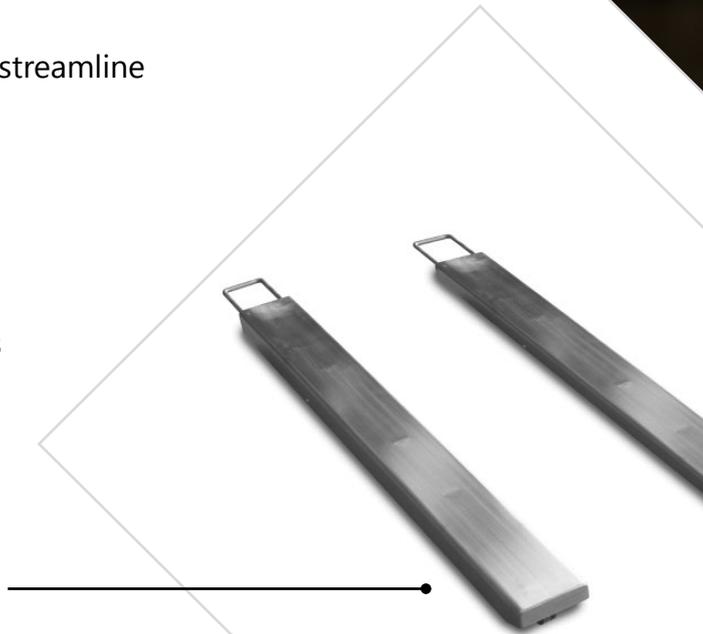



## Add-ons will make weighing quicker and easier

As well as data transfer capabilities, you can also connect the JIK indicator to a **hi/lo light tower**, which will alert you when a load is over the required weight, under, or if it's the exact weight it needs to be. The relay board allows you to further automate weighing: Switch feeds on or off depending on how much weight is on the scale.

For larger premises, our large remote display will mean **weight readings are visible from longer distances**.

## Key features



- Stainless steel IP68 waterproof weighbeams
- Stainless steel IP67 splashproof indicator
- Rechargeable battery
- Tare
- Bright LCD display
- RS-232 fitted as standard
- Connects to printers, PCs, light tower, remote display
- Suitable for automated processes, including liquid filling
- Built-in carry handles and wheels
- Adjustable levelling feet
- Wall bracket for indicator included

## Standard or Trade Approved?

For simple weighing and internal recording processes, the standard, non approved PB-SS-JIK is perfect.

However, where the **price of your goods is based on weight**, your scale will need to be Trade Approved.


The **PB-SS-JIK-APP** is the **Trade Approved** option. Calibration certificates can be supplied with both approved and non approved options.

## Specification



- Capacity: 600kg/1500kg/2000kg
- Graduations: 0.2kg/0.5kg
- Dimensions: 1360mm x 120mm x 85mm
- Power: Mains adaptor or rechargeable battery

# PB-SS-JIK and PB-SS-JIK-APP: Key features at-a-glance

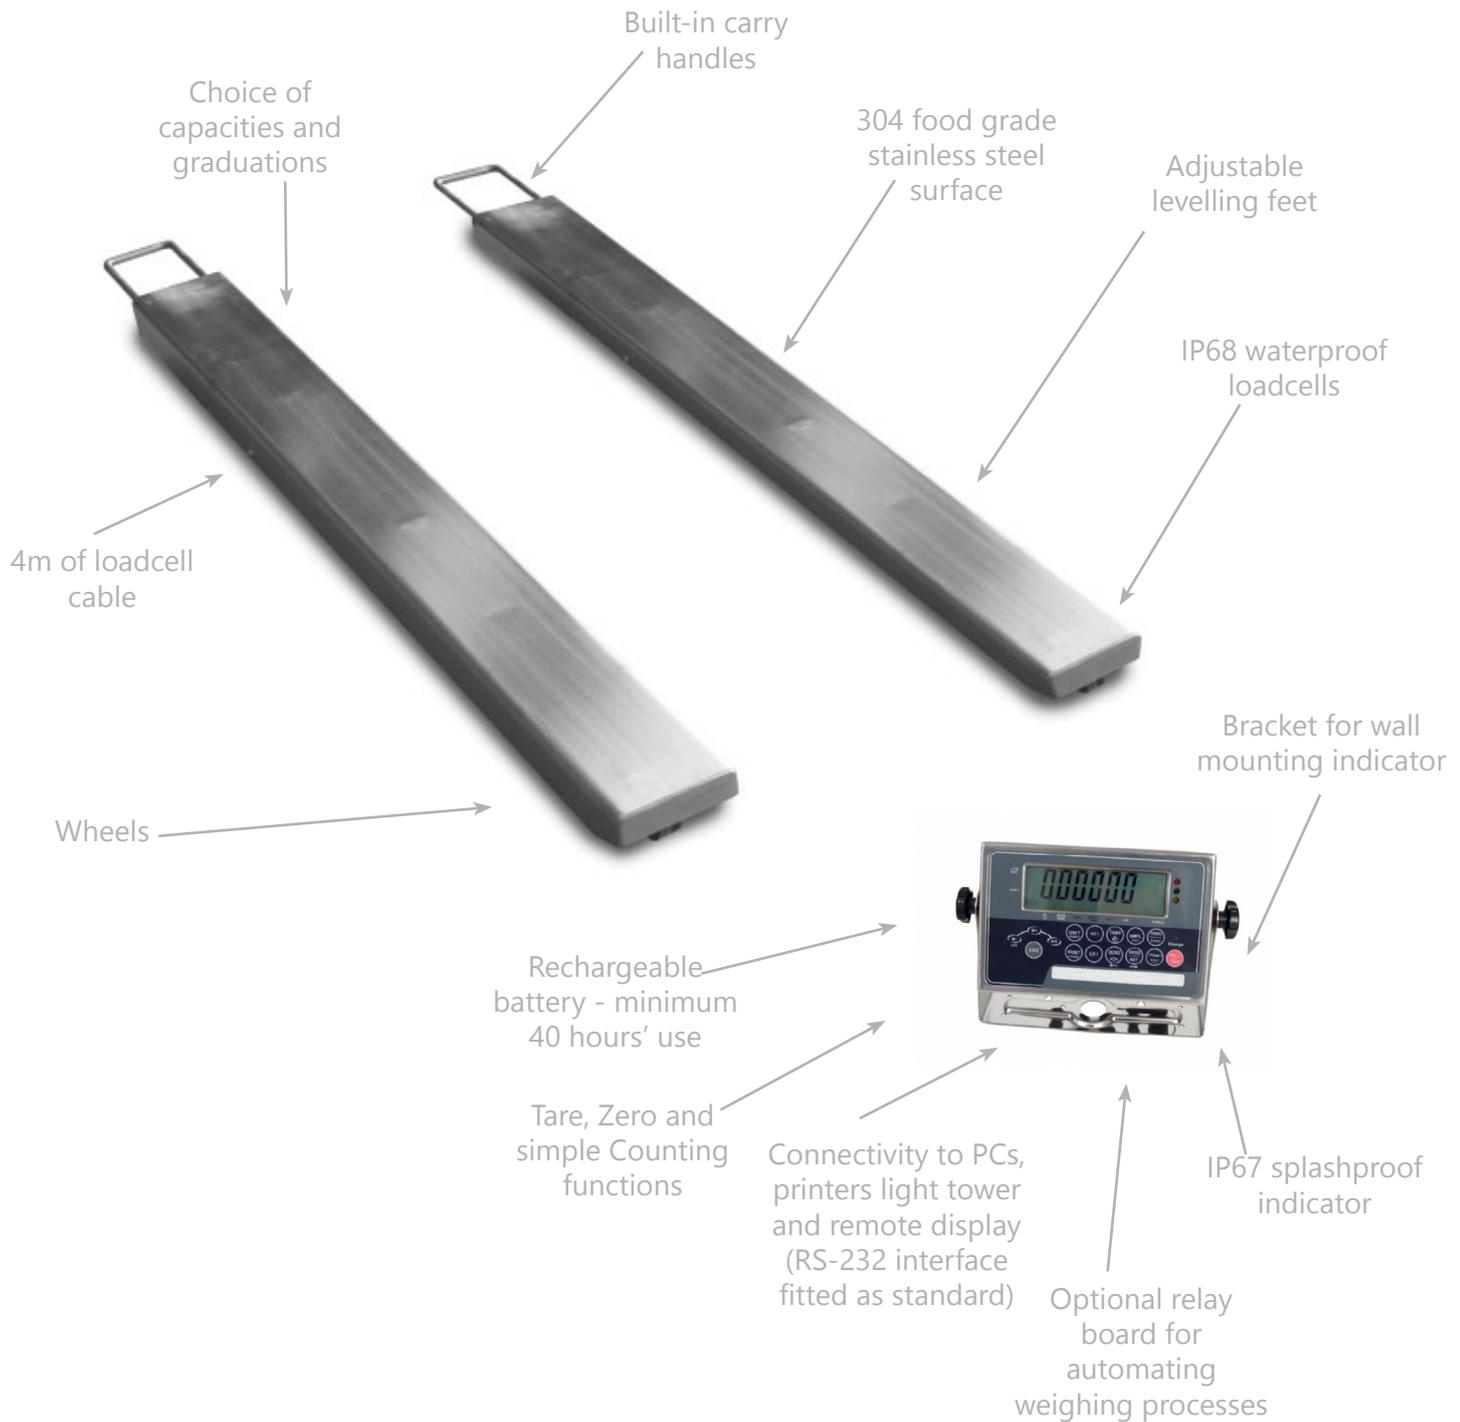

# MARSDEN

Tel: 01709 364296 / 0800 169 2775

Fax: 01709 364293

E-mail: [sales@marsdengroup.co.uk](mailto:sales@marsdengroup.co.uk)

[www.marsden-weighing.co.uk](http://www.marsden-weighing.co.uk)

 MarsdenWeighing

 @MarsdenWeighing

 [www.youtube.com/MarsdenWeighing](http://www.youtube.com/MarsdenWeighing)

 <http://pinterest.com/marsdenweighing>