


MARSDEN

JCE High Precision Counting Scale

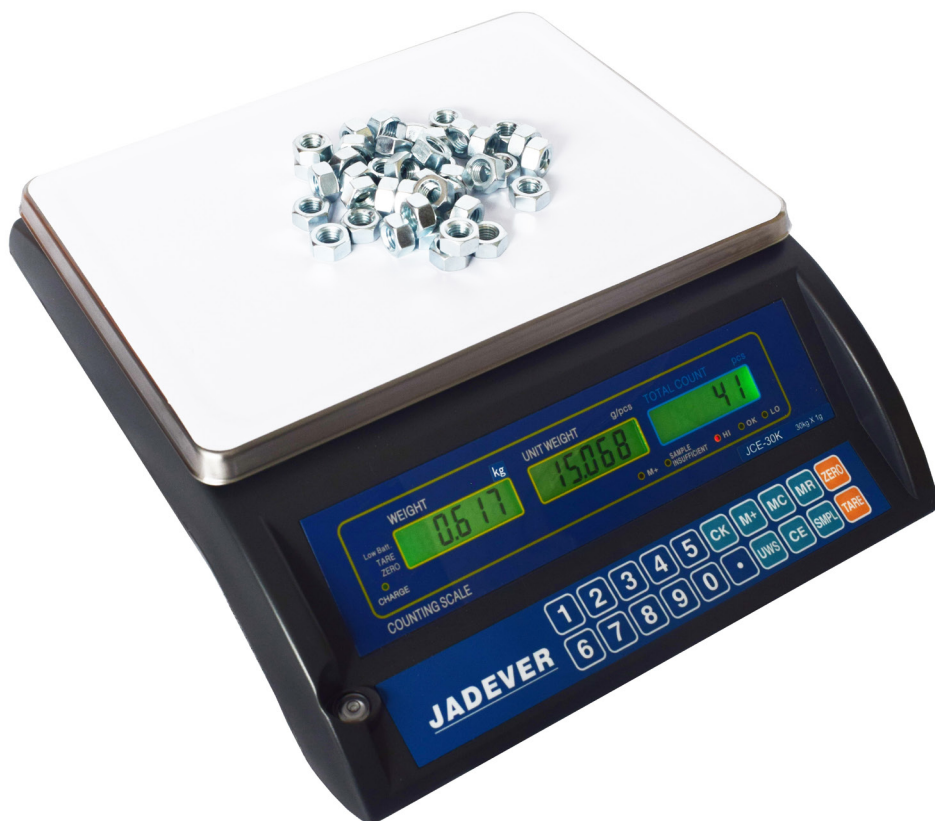


- Wide range of capacities and graduations
- Tare function to remove unwanted weight
- Stainless steel top pan
- Three backlit LCD display
- Water resistant keypad
- Covered by 1 year warranty

Jadever JCE:

High Precision Counting Scale

- Wide range of capacities and graduations
- Tare function to remove unwanted weight
- Stainless steel top pan
- Three backlit LCD display
- Water resistant keypad
- Accumulation function
- 99 item accumulation memory
- Auto-power off
- Internal resolution 1/600,000
- Covered by 1 year warranty

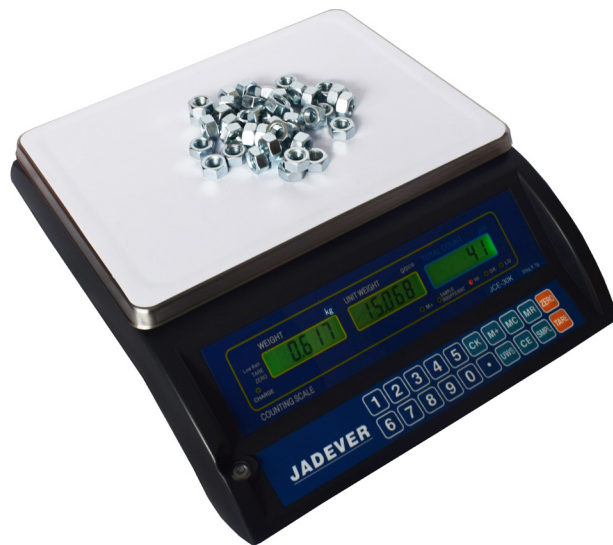

What is the JCE?

The Jadever JCE is an affordable counting scale for parts counting, sampling and check weighing. This portable counting scale comes with a full range of features.

The features include Hi/Lo check weighing, zero mode, pre-set tares, a full numeric keypad and built-in overload protection. It also has accumulation and auto power-off function.

Robust weighing

The JCE is built for regular weighing and counting of parts. Its durable shell and water resistant keypad make it perfect for many environments and for many uses.

The scale comes with three backlit LCD electronic displays which shows the weight readings brightly and clearly, making the JCE a suitable check weigher of choice for use in warehouses.

Choice of capacities

The JCE has a choice of capacities and graduations available to meet your needs. Capacities range from 3kg to 30kg and graduations from 1g.

The Tare function means that any unwanted weight, such as the weight of a container holding parts, can be quickly and easily removed for a highly accurate counting reading.

Capacity:	3kg, 6kg, 15kg, 30kg	Power Supply:	Mains/Rechargeable
Graduations:	0.1g, 0.2g, 0.5g, 1g	Battery Life:	60 hours of continuous use
Functions:	Tare, Portable, Accumulation, Hi Lo Alarm	Approvals:	Non-Approved
Dimensions:	400mm x 335mm x 120mm	Optional Extras:	Printer, RS-232, U-Key
Weight of Scale:	6kg	Warranty Period:	1 Year